

B & K

POWER EQUIPMENT



Briggs & Stratton Maintenance Chart

| |
|--|
| First 5 Hours |
| * Change oil |
| Every 8 hours or Daily |
| * Check engine oil level |
| * Clean area around muffler and controls |
| * Clean finger guard/rotating screen |
| Every 25 hours or Annually |
| * Clean air Filter |
| * Clean pre-cleaner |
| Every 50 Hours or Annually |
| * Change engine oil |
| * Replace oil filter (if required) |
| * Check muffler and spark arrester |
| Annually |
| * Replace air filter |
| * Replace pre-cleaner |
| * Replace spark plugs |
| * Clean air cooling system |
| * Replace fuel filter |
| * Check valve clearance |
| |

B & K Power Equipment, Inc. Phone : (815) 923-4547
 17009 Harmony Road Fax : (815) 923-2043
 Marengo, IL 60152 info@bandkpower.com